

## Set de verificación de calibración para HI 755

HI755-11



## Descripción

El set de verificación de calibración de alcalinidad marina Checker® HC **HI755-11** proporciona una solución simple para validar la alcalinidad marina Checker® HC **HI755** que tiene un rango de 0 a 300 ppm CaCO<sub>3</sub>. Este conjunto de estándares de alta calidad se fabrica en nuestras instalaciones de última generación y se suministra con un certificado de análisis. El certificado de análisis proporciona el número de lote, los valores de referencia y la fecha de vencimiento para la trazabilidad al certificar el Checker®HC.

## Especificaciones

No Especifica

## Accesorios

No Especifica

## Cómo pedir

No Especifica

## Ventajas

El **HI755-11** es un conjunto de estándares de calibración de alta calidad que permite a los usuarios validar la alcalinidad marina Checker® HC **HI755**. El **HI755-11** incluye una cubeta sellada para cero ppm de CaCO<sub>3</sub> y una cubeta teñida para una muestra equivalente a 100 +/- 10 ppm de CaCO<sub>3</sub> a 25 °C.

### -Suministrado con certificado de análisis:

- Código de producto
- Número de lote
- Fecha de caducidad



## CERTIFICATE OF ANALYSIS

Product Name: CALIBRATION CHECKING SET FOR HI 711

Product Code: HI 711-11

Lot number: SC0372/14

Expiration date: October 2017

Standard cuvette	Lot number	Standard Value @ 25°C (ppm)	Passed
A, HI 711-11	2038	1.00 ± 0.05	✓
B, HI 711-11	2039	1.00 ± 0.05	✓

Hanna Instruments certifies these standards meet the stated tolerance limits as indicated. These should be used for quality control to validate instrument function on the specified Hanna instrument only. Store standards in the storage box upright at room temperature. Do not use standard cuvettes.


Instructions for use:

1. Thoroughly wipe standard cuvette with HI731318 lint free cloth and only handle using top of cuvette. The cuvette wall must be dry and free of smudges.
2. At the C.1 prompt place A, HI 711-11 standard cuvette into the holder of the Checker and press operations button.
3. At the C.2 prompt place B, HI 711-11 standard cuvette into the holder and press the operations button.

Acceptable results must be between 0.95 and 1.05 ppm @ 25°C.

File number: CERT711-11\_SC0372/14

QA manager: Bogdan Munteanu

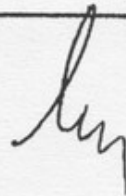

## Video

No Especifica