

**Set de Verificación de Calibración de Amoníaco para Checker® HC**  
HI700-11



## Descripción

El Set de Verificación de Calibración de Amoníaco para Checker® HC - **HI700-11** proporciona una solución simple para validar el Checker® HC para Amoníaco de Rango Bajo - **HI700**. Este set de estándares de alta calidad se fabrica en nuestras instalaciones de última tecnología y viene con un Certificado de Análisis. El Certificado de análisis proporciona el número de lote, los valores de referencia y la fecha de vencimiento para la trazabilidad al verificar el Checker® HC.

## Especificaciones

<b>Product Name</b>	Set de Verificación de Calibración de Amoníaco para Checker® HC - <b>HI700-11</b>
---------------------	---

Quote Required	No
Certificado de Análisis	Sí
Envase	Cubetas
Cantidad de Análisis	1 juego

## Accesorios

No Especifica

## Cómo pedir

No Especifica

## Ventajas

El **HI700-11** incluye una cubeta sellada para cero ppm de amoníaco y una cubeta con coloración equivalente a 1.50 +/- 0.10 ppm a 25°C de amoníaco.



**-Reutilizable con larga vida útil**

**-Suministrado con Certificado de Análisis, el cual incluye :**

- Código de producto
- Número de lote
- Fecha de caducidad



## CERTIFICATE OF ANALYSIS

Product Name: CALIBRATION CHECKING SET FOR HI 711  
 Product Code: HI 711-11  
 Lot number: SC0372/14  
 Expiration date: October 2017

Standard cuvette	Lot number	Standard Value @ 25°C (ppm)	Passed
A, HI 711-11	2038	1.00 ± 0.05	✓
B, HI 711-11	2039	1.00 ± 0.05	✓

Hanna Instruments certifies these standards meet the stated tolerance limits as indicated. These should be used for quality control to validate instrument function on the specified Hanna instrument only. Store standards in the storage box upright at room temperature. Do not use standard cuvettes.


Instructions for use:

1. Thoroughly wipe standard cuvette with HI731318 lint free cloth and only handle using top of cuvette. The cuvette wall must be dry and free of smudges.
2. At the C.1 prompt place A, HI 711-11 standard cuvette into the holder of the Checker and press operations button.
3. At the C.2 prompt place B, HI 711-11 standard cuvette into the holder and press the operations button.

Acceptable results must be between 0.95 and 1.05 ppm @ 25°C.

File number: CERT711-11\_SC0372/14

QA manager: Bogdan Munteanu

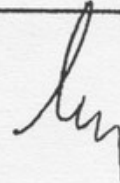

## Video

No Especifica